


Novotron 522 Design







Novotron 524 Design

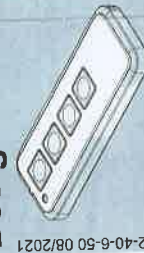




918002-40-6-50 08/2021

Novotron 522 Design
Novotron 524 Design
f = 433.92 MHz
P _{max} < 10 mW
-20 °C
+40 °C
TORMATIC®
Eisenhüttenweg 6
D-44145 Dortmund
www.tormatic.de




DE Batteriewechsel
EN Changing the battery
FR Remplacement de la pile
NL Batterijvervanging
ES Cambiar la pila
IT Sostituzione della batteria
PL Wymiana baterii
PT Substituição das pilhas
CS Výměna baterie
EL Αλλαγή μπαταρίας
HU Elemcsere
SL Zamenjava baterije
HR Zamjena baterije
DA Batteriskift
NO Skifte batteri
SV Batteribyte
FI Pariston vaihtaminen
LT Bateriajos keitimas
RU Замена батареек
TR Batarya değişimi

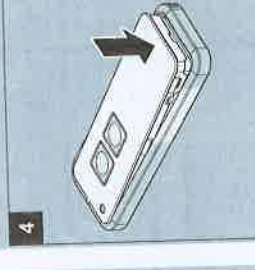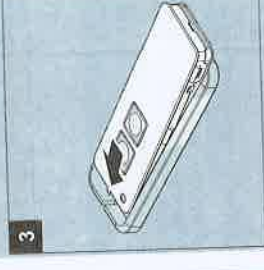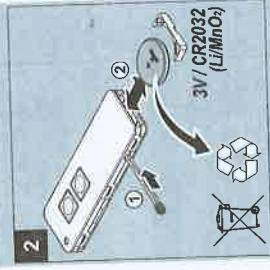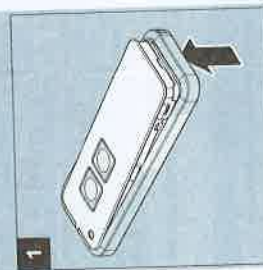



DE Enternen Startfunktion / Zusatzfunktion
EN Programming the start function / additional function
FR Apprentissage fonction démarrage / fonction complémentaire
NL Inlezen startfunctie / extra functie
ES Memorización de la función de arranque / función adicional
IT Funzione di avvio configurazionale / funzione aggiuntiva
PL Programowanie funkcji start / funkcji dodatkowej
PT Ensalar a função inicial / adicional
CS Naučení funkce Start / přídatné funkce
EL Εκπαίδευση λειτουργίας έναρξης / πρόσθετης λειτουργίας

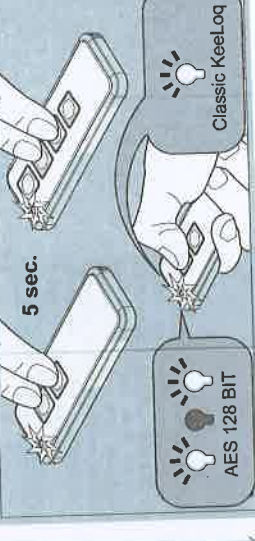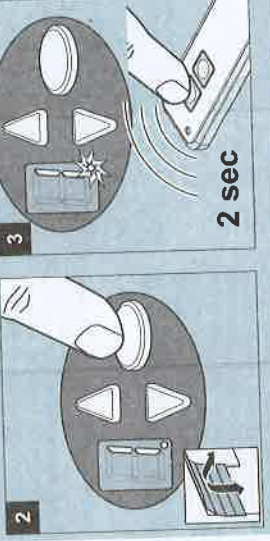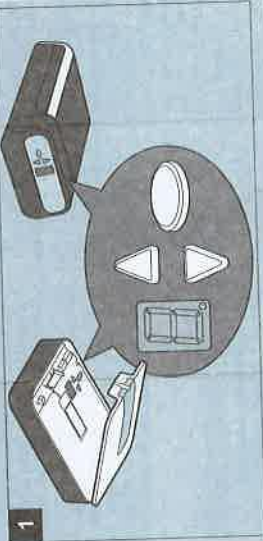





DE Entfernen Startfunktion / Zusatzfunktion
EN Removing the start function / additional function
FR Suppression fonction démarrage / fonction complémentaire
NL Inlezen startfunctie / extra functie
ES Memorización de la función de arranque / función adicional
IT Funzione di avvio configurazionale / funzione aggiuntiva
PL Programowanie funkcji start / funkcji dodatkowej
PT Ensalar a função inicial / adicional
CS Naučení funkce Start / přídatné funkce
EL Εκπαίδευση λειτουργίας έναρξης / πρόσθετης λειτουργίας

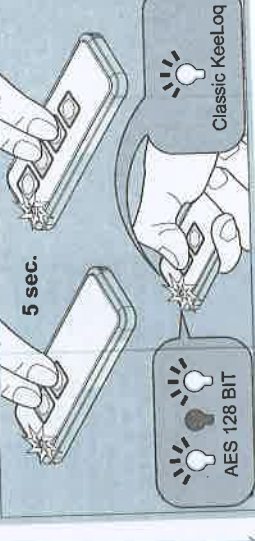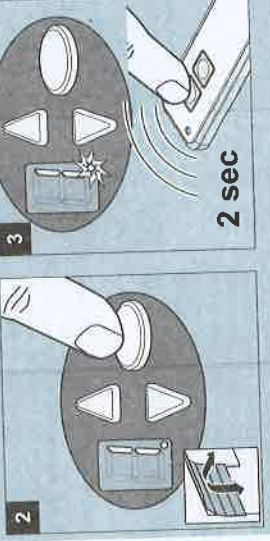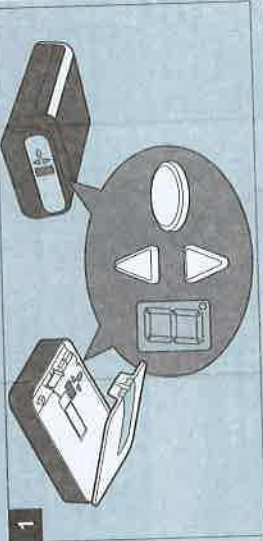

DE Entfernen Startfunktion / Zusatzfunktion
EN Removing the start function / additional function
FR Suppression fonction démarrage / fonction complémentaire
NL Inlezen startfunctie / extra functie
ES Memorización de la función de arranque / función adicional
IT Funzione di avvio configurazionale / funzione aggiuntiva
PL Programowanie funkcji start / funkcji dodatkowej
PT Ensalar a função inicial / adicional
CS Naučení funkce Start / přídatné funkce
EL Εκπαίδευση λειτουργίας έναρξης / πρόσθετης λειτουργίας

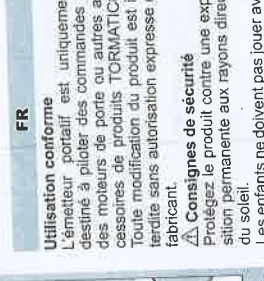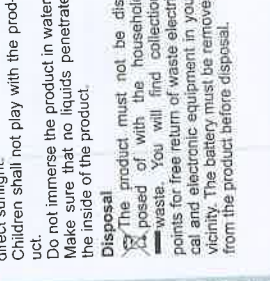

DE Entfernen Startfunktion / Zusatzfunktion
EN Removing the start function / additional function
FR Suppression fonction démarrage / fonction complémentaire
NL Inlezen startfunctie / extra functie
ES Memorización de la función de arranque / función adicional
IT Funzione di avvio configurazionale / funzione aggiuntiva
PL Programowanie funkcji start / funkcji dodatkowej
PT Ensalar a função inicial / adicional
CS Naučení funkce Start / přídatné funkce
EL Εκπαίδευση λειτουργίας έναρξης / πρόσθετης λειτουργίας

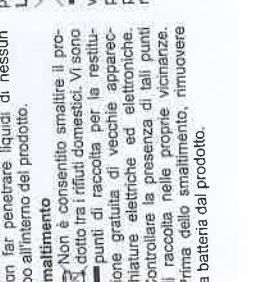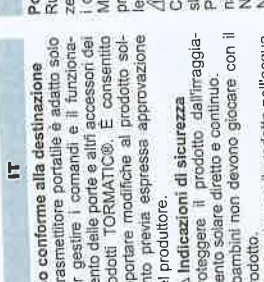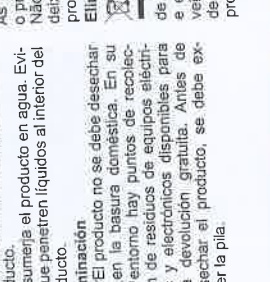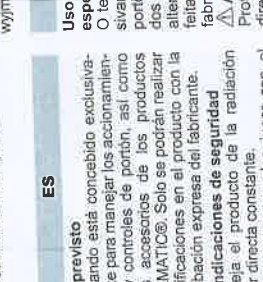

DE Entfernen Startfunktion / Zusatzfunktion
EN Removing the start function / additional function
FR Suppression fonction démarrage / fonction complémentaire
NL Inlezen startfunctie / extra functie
ES Memorización de la función de arranque / función adicional
IT Funzione di avvio configurazionale / funzione aggiuntiva
PL Programowanie funkcji start / funkcji dodatkowej
PT Ensalar a função inicial / adicional
CS Naučení funkce Start / přídatné funkce
EL Εκπαίδευση λειτουργίας έναρξης / πρόσθετης λειτουργίας

